English

Edifier iF200 Alarm Clock and Speaker System for iPod

Thank you for purchasing iF200 Alarm Clock and Speaker System for iPod.It charges and plays music from your iPod with high quality sound,and can wake you up with music from your iPod This Docking Alarm also recognizes your iPod so that clock time always shows.

Please read this user's guide before installing, setting up, or using your new alarm clock.

SPECIFICATIONS

Amplifier power output:	RMS 3W x 2 (THD+N=10%)
Signal to noise ratio:	≥ 85dBA
Amplifier distortion:	≤ 0.5%
Input Sensitivity:	350mV ±50mV
Channel separation:	≥ 45dB
Frequency response:	100Hz-20KHz

1. DOCKING YOUR iPOD

1. Connect your Docking Alarm to the AC wall outlet using the included AC adapter.
2. Adjust the Plate Depth Dial and the 30-pin Connector to the position that your iPod fits.
3. Dock your iPod into your Docking Alarm, adjust the volume to a comfortable level, and enjoy the perfect sound performance the product brings to you.

30-pin Connector
Slide to fit your iPod.

Plate Depth Dial
Turn the dial to match your iPod.

2. RECOGNIZING YOUR iPOD

If your iPod has the classic linear menu structure, the product can "recognize" your iPod and guide it to display the clock interface.

After the Docking Alarm recognizes your iPod, the iPod's clock appears automatically whenever your iPod is docked. Recognition is necessary in the following cases:

- When you dock your iPod into the cradle for the first time.
- When the structure of the main menu of your iPod has been changed.
- When you dock another iPod into the cradle.

1. Make sure "Extras" is visible in your iPod's main menu.
2. Press and hold **SNOOZE** for 3 seconds to enter recognition mode. The Docking Alarm Clock beeps twice, and the iPod's main menu appears.
3. Press **SNOOZE** repeatedly to move the highlight down until "Extras" is selected. If the "highlight" band passes "Extra", press the Volume button repeatedly to go back.
4. Press and hold **SNOOZE** for about 3 seconds. Two beeps sound and the time appears, recognition completed.

Notes:

- Use only **SNOOZE and VOLUME** and not the iPod's scroll wheel to navigate through the menu.
- If there are more than 9 seconds' pause during the recognizing steps,recognition ends, and your iPod keeps on doing its current work. You could re-enter the recognition mode as shown in the above.
- When the highlight reaches the end of the menu, it is recommended that you don't move on, otherwise the system may be confused and get lost.

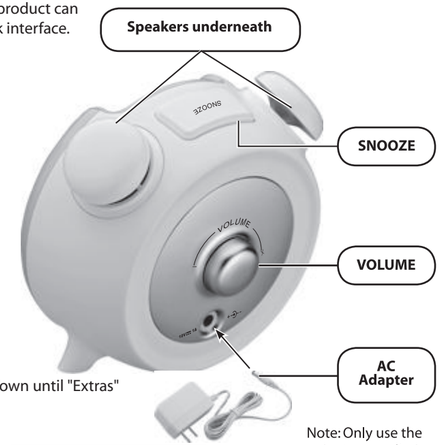

Note: Only use the adapter supplied with this product.

3. SNOOZE

Pressing **SNOOZE** stops the music playback for 9 minutes.
Press **VOLUME**,music resumes.
After finishing the recognition procedure, if you navigate to another menu branch on your iPod, one single click on the VOLUME button will retrieve the clock time display.
If that fails, you need to repeat the recognition procedure which has not yet been finished.

4. CLEARING THE MEMORY

You may erase the memory of your Docking Alarm following the method below:
1. Remove your iPod
2. Press SNOOZE and VOLUME at the same time.
Memory erased with two beeps heard.

Warning

SAFETY INSTRUCTIONS
Please read all the instructions herein. Please retain this manual safely for future reference.
Please heed all safety warnings. Please Install in accordance with the Manufacturer's instructions.
Please adjust the volume control to a comfortable level to avoid damaging your hearing and the system.

WARNING:

- Do not expose this apparatus to rain or moisture.
- Do not use the speakers near water, and do not immerse them in any liquid or pour any liquid on them. Place the speakers away from all heat sources, such as heat registers, stoves, and direct sunlight.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wider blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- For added protection during lightning storms, unplug the speakers from the electrical outlet and turn off the computer.
- Unplug this apparatus when unused for long periods of time.
- Do not block the openings in the speaker cabinets, never push objects into speaker vents or slots because of fire or electric shock hazards, and provide sufficient space around the speakers for proper ventilation.
- Place the speakers in a stable location so that it will not fall causing damage to the speakers or bodily harm.
- Unplug the speakers from the computer and from the electrical outlet before cleaning them with a damp cloth.
- Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Refer all servicing to qualified service personnel only.

Copyright©2008. All Rights Reserved. Manual Edition 1.2, Aug. 2008, Printed in China
iPod is a trademark of Apple Computer, Inc., registered in the U.S. and other countries. This product is not designed, manufactured, sponso red, or endorsed by Apple Computer, In